


## HP OG-25 Clock

Ozone Clock

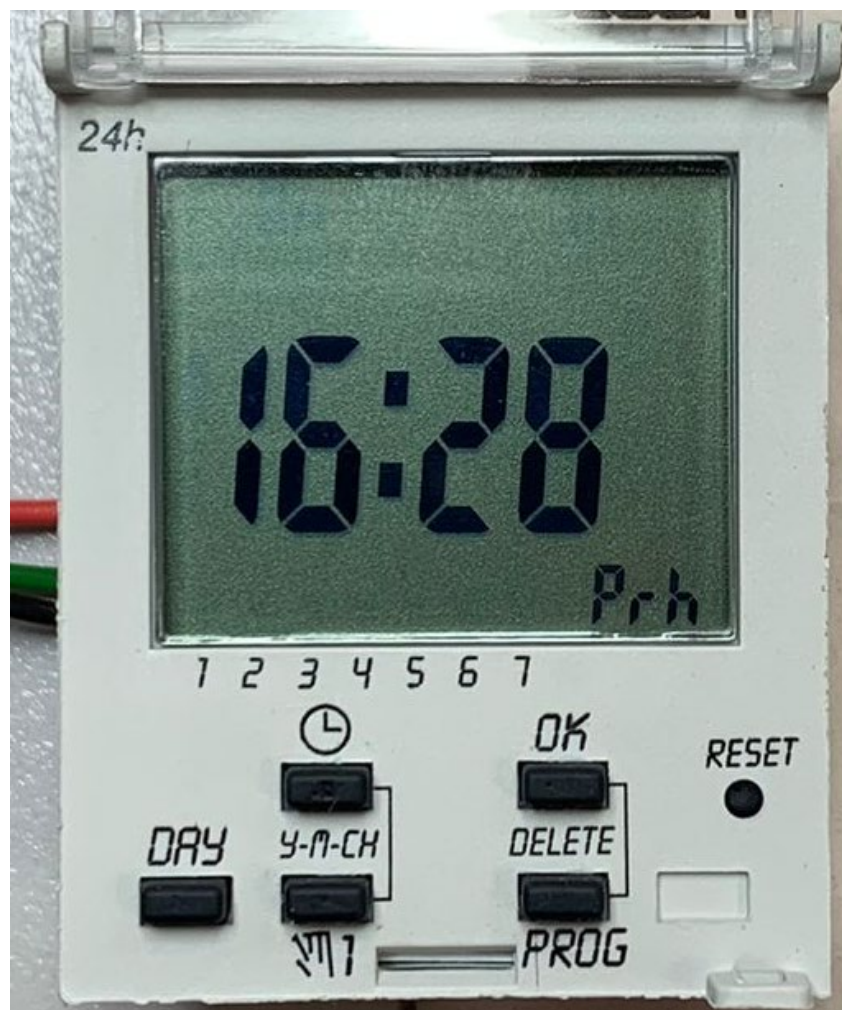

Versie:	1.0
Status:	Concept
Datum:	01-11-2021
Auteur:	Rudy Weert / Hung Tran
Bestand:	

## Historie

Revisie	Auteur	Datum	Omschrijving
1	R.E.J./THT	01-11-2021	First version

## Referentie

## Inhoud

<b>1. Preparation:</b>	<b>4</b>
<b>2. Programming:</b>	<b>5</b>

## 1. Preparation:

**Attention:** Make sure the humidifier is connected to a power source before starting the programming procedure.

**Preparations:** Make sure you have a functioning clock by checking the display after properly connecting it to the **HP OG-25**.




The clock should display a screen check first, then display a blinking “20 06” if it's been connected properly to its power source.

## 2. Programming:


### Step 1:

Press the “OK” 4 times until you get to the page displaying “0:00”. This is where you can set the current time.

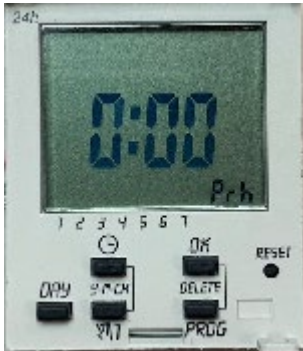

### Step 2, Set the current time:

To set the desired hour, press and hold the “Clock” (🕒) button as shown below. Release the button when the clock reaches the desired hour.

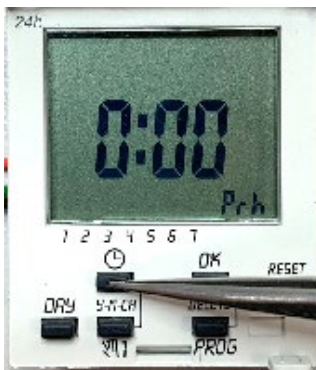


To set the desired minutes, press the “Clock” (🕒) button repeatedly as indicated below. Then press “OK” once to confirm the set time.



### Step 3, Ozonation timing,

After confirming the current time, you will be brought to the program page where you can set the time that the humidifier will start and end it's ozonation. Make sure to only use 1 program. The "P 1" in the bottom right corner will indicate which program is being programmed.

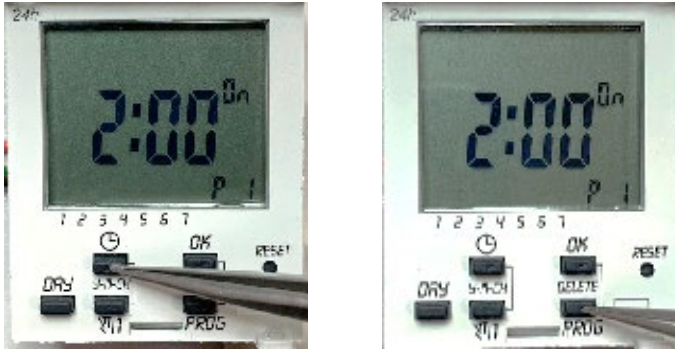


Set the start time at "2:00" by holding in the "Clock" (🕒) button. Then press "PROG" to move to the next page where you can set the end time for the ozonation.

Use the "Clock" (🕒) button to set the time to "4:00" then press the "PROG" button to continue to the next page.



After you complete setting the ozonating time you will have to scroll through all the available program pages until you get to the main screen. Do this by pressing repeatedly on the "PROG" button.

To make sure only one program has been used press **“PROG”** once from the main screen to be taken to the program page. Use the program indicators in the bottom right corner to know which programs is being displayed. If a program is not in use, it will display the screen listed below. Press and hold on the **“OK”** and the **“PROG”** buttons simultaneously to delete a program. Continue checking all the pages until the main screen has been reached.

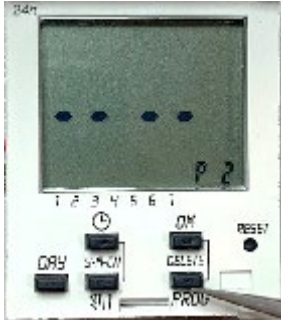

- End Document -