

4. Test manual

When the clock is not performing as expected, a reset can be performed. To reset the clock, press the reset button using a thin object. When a reset has been performed, a reinitialization is needed. Follow the instruction listed below to reinitialize the clock.

4.1 Set clock.

Step 1.

Make sure the humidifier is connected to a power source (If this has not yet been done). Wait until the language setting appears to start setting up the clock.



Step 2.

Use the arrow buttons to set the preferred language then confirm using the "OK" Button.



Step 3

Use the arrow buttons to set the current year, then confirm this using the "OK" Button.



Step 4.

Use the arrow buttons to set the current month, then confirm this using the "OK" Button.



Step 5.

Use the arrow buttons to set the current day, then confirm this using the "OK" Button.




Step 6.

Use the arrow buttons to firstly set the hours, then confirm this using the “OK” Button.




Step 7.

After setting the hours use the same buttons to set the minutes and then pressing the “OK” Button to confirm these settings. When done correctly a “OKAY” screen will appear.

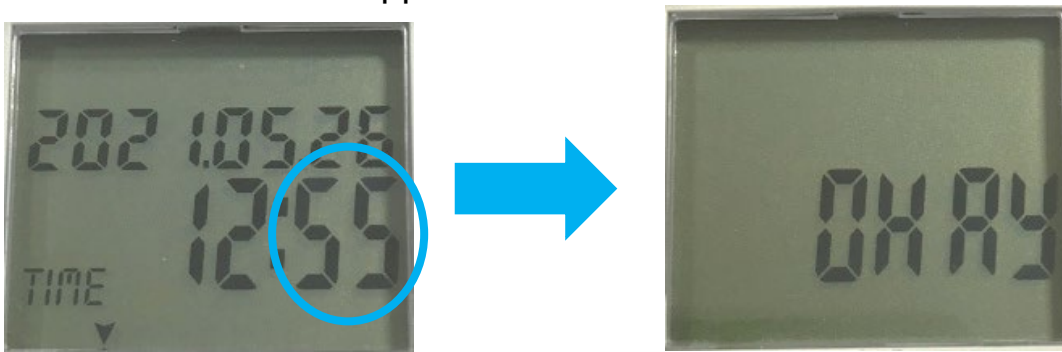

Step 8.

After setting the time and date you will be taken to the **-dst- (daylight saving time)** page, you may set this setting to “Euro” if desired. Press the “OK” button once again to be taken to the main screen.

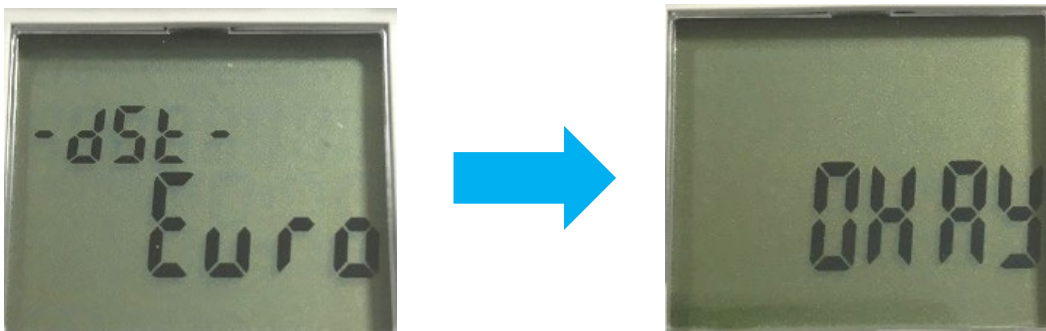

4.2 Ozone Time Setup.

Step 1.

You can start the setup by pressing the menu button. Use the “OK” to confirm and the “menu” button when you would like to return to the previous page.

Select “Prog SET”



Step 2.

The display will show the available free programming slots
The available slots amount should be 58




Step 3.

Select program 1 (Free P01) using the arrow buttons.



Step 4

Then select channel 1 and confirm this by pressing "OK" button.

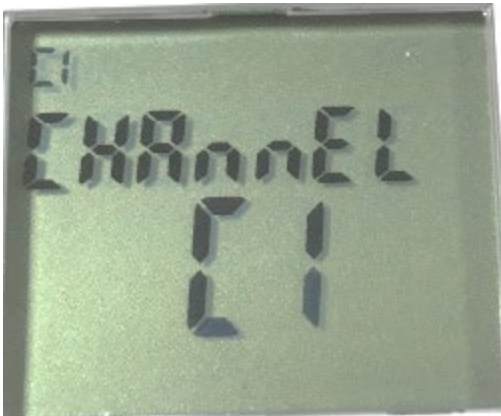

Step 5.

Use the arrow buttons to select the days that you would like the ozone to be functioning.



Step 6.

After selecting the days, you will be given the option to set the time of day where the ozone will be functioning.

Set the start time at: 02:00AM using the arrow buttons then confirm using the "OK" button.



Step 7.

Confirm the minutes "00" using the "OK" button.



Step 8.

The seconds may also be 00", confirm this using the "OK" button.



Step 9.

Set the end time at: 04:00AM using the arrow buttons and confirm using the "OK" button.



Step 10.

Set the stop minutes to 00 using the arrow buttons and confirm this using the "OK" button.



Step 11.

Set the "stop" seconds to 00" using the arrow buttons and confirm this using the "OK" button.

The display should display the "- - - OKAY" message, and the number of free slots should be 57.



Step 12

Press menu to get to the main screen.
This should be the main screen.



4.2 Testing.

Step 1.

Press menu



Step 2.

Scroll down using the arrow buttons and select "Override" using the "OK" button.



Step 3.

Select "C1" using the arrow buttons and confirm using the "OK" button.




Step 4.

Select "C1 On, PERM" using the arrows and confirm using the "OK" button.

The humidifier should do the following:

- The humidifier is going to ozonate.
- The fan will run at 100% capacity.
- The misting should deactivate.

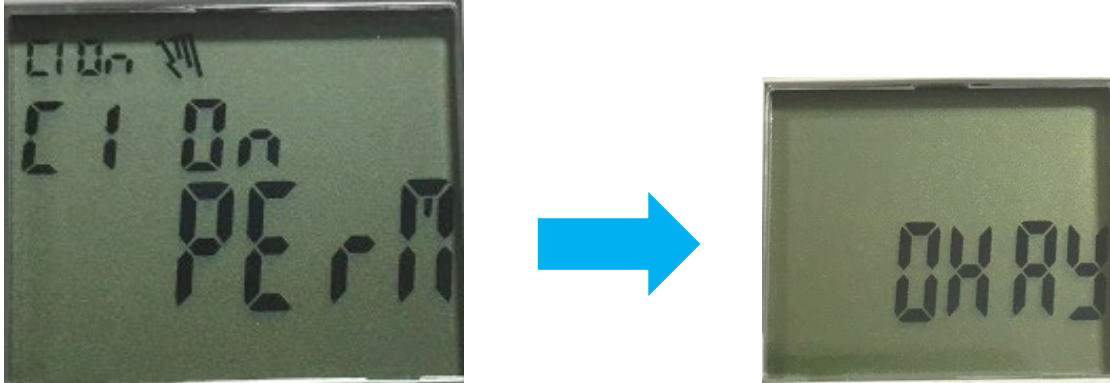


Step 5.

After a test run select and confirm "C1, AUTO" to stop the testing procedure.

When confirming "C1, AUTO" the humidifier should do the following:

- The humidifier should stop ozonating.
- The Fan should run at input setting.
- The misting should return to the input setting.

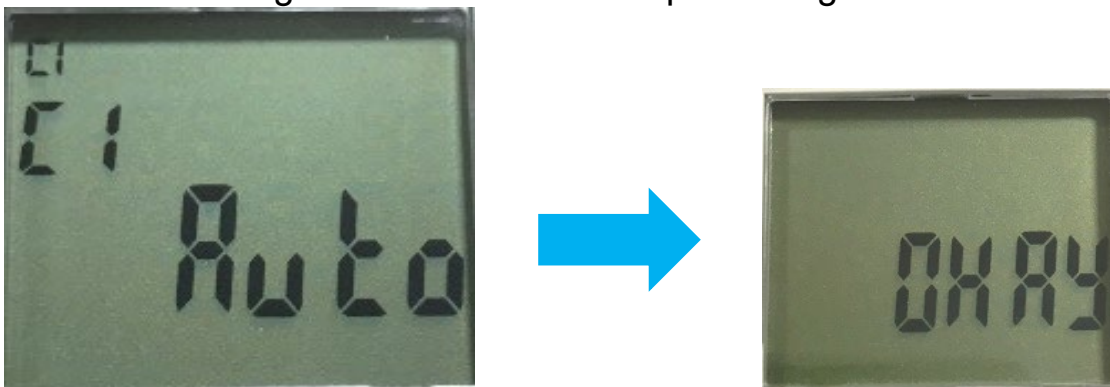

Step 6.

Press the menu button continuously to return to the main screen.





Attention: The clock should always be on the main screen after usage. This does not happen automatically, therefore you should manually set the clock to the main screen by continuously pressing on the menu button until the main screen appears.

Deleting a program.

To delete a program, start from the main screen.



Press the **"MENU"** button once to enter the menu, scroll down to **"erase PG"** and press **"OK"** scroll down and select **"ALL"** by pressing **"OK"**

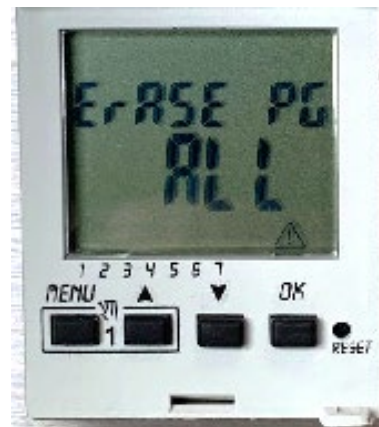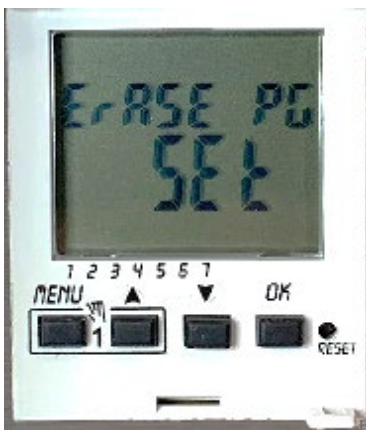

After erasing all the programs, a new program needs to be installed. Please do so by following the steps listed above.

- End Document -